
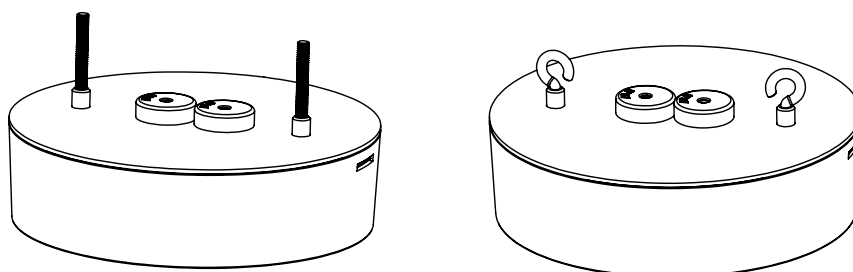


OWA SU LED C116


INSTRUKCJA MONTAŻU **PL**

Zestaw umożliwia montaż oprawy OWA SU LED na linkach lub łańcuszkach (zamawianych osobno) lub bezpośrednio do sufitu podwieszanego przy pomocy płyty montażowej.

WYMIARY

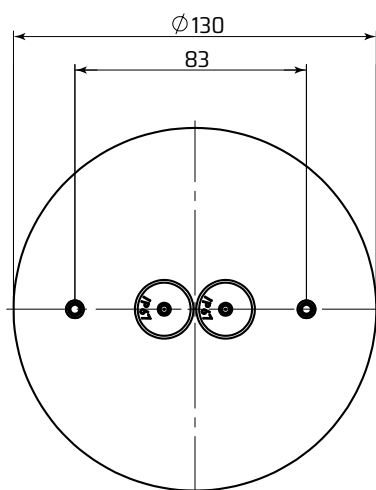


ELEMENTY MOCOWANIA

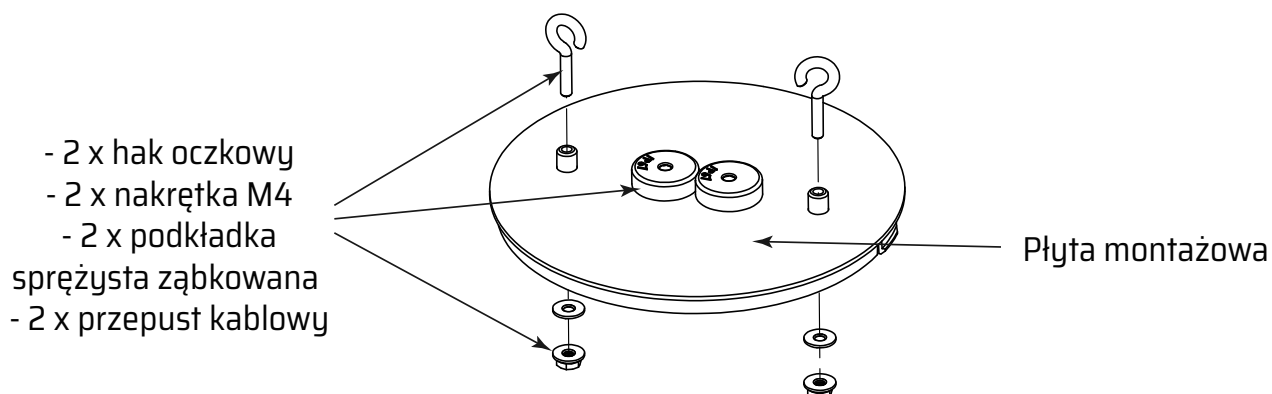

Należy stosować się do wymagań i zaleceń bezpieczeństwa zawartych w instrukcji montażu oprawy

INSTALACJA


1. Rozpakować zestaw mocowania i oprawę. Zweryfikować ich stan po transporcie.
2. W celu uszczelnienia w rowkach podstawy oprawy nanieść silikon neutralny.

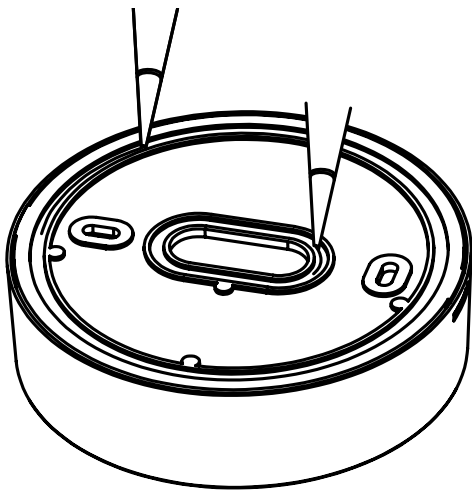

3. W przypadku bezpośredniego mocowania do sufitu (konieczny dostęp do przestrzeni międzysufitowej) wywiercić otwory montażowe zgodnie z rozstawem pokazanym na rysunku, tak aby przewody wyprowadzone z sufitu swobodnie przechodziły przez przepusty w płycie mocującej.


Złożyć mocowanie razem z podstawą i wkręcić śruby M4 odpowiedniej długości w otwory montażowe mocowania C116. Zalać łby śrub silikonem neutralnym.

Przełożyć przewody zasilające i komunikacyjne (tylko wykonanie CT) przez przepusty kablowe w płycie mocowania oraz przez otwór w podstawie oprawy. Następnie przymocować zestaw do sufitu nakręcając nakrętki kołnierkowe od wewnętrznej strony sufitu.

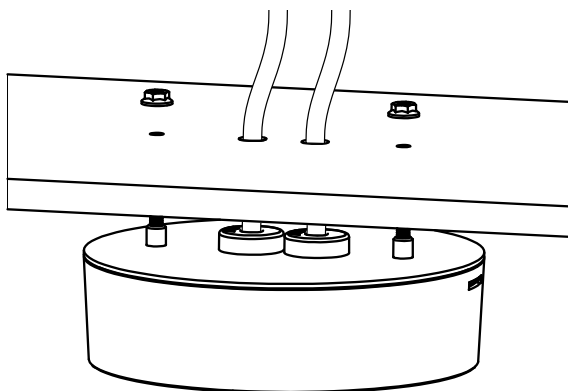

4. W przypadku mocowania zwieszakowego złożyć mocowanie razem z podstawą i wkręcić haczyki oczkowe w otwory montażowe mocowania C116, następnie przykręcić nakrętki kołnierkowe. Zalać nakrętki silikonem neutralnym.

Przełożyć przewody zasilające i komunikacyjne (tylko wykonanie CT) przez przepusty kablowe w płycie mocowania oraz przez otwór w podstawie oprawy. Zwiesić zestaw na linkach lub łańcuszkach z sufitu (elementy zamawiane osobno).

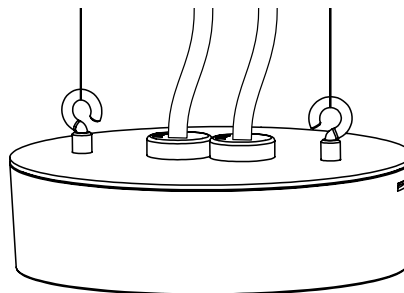

5. Kolejne czynności wykonywać zgodnie z instrukcją oprawy.


GWARANCJA

Gwarancja na wyrób obowiązuje pod warunkiem przestrzegania zaleceń i wskazówek producenta oraz użytkowania produktu zgodnie z przeznaczeniem, na okres 12 miesięcy licząc od daty sprzedaży, chyba że wyrób sprzedany został w ramach kontraktu i ten stanowi inaczej. Gwarancja nie obejmuje usterek mechanicznych powstałych z winy klienta, a także usterek wynikłych na skutek złego podłączenia bądź użytkowania produktu.

OWA SU LED C116




INSTALLATION MANUAL **EN**

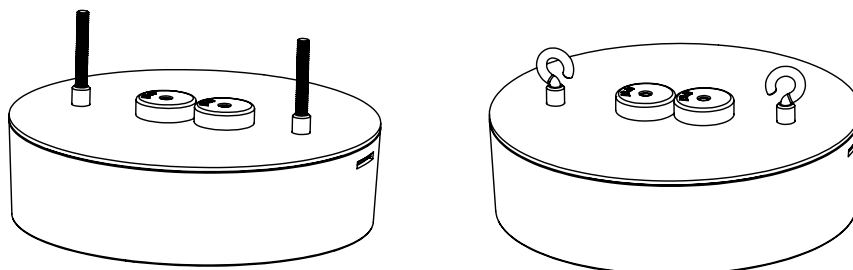


The mounting kit is used to mount the OWA SU LED luminaire with cords, chains (ordered separately) or directly to a suspended ceiling with a dedicated mounting plate.

DIMENSIONS

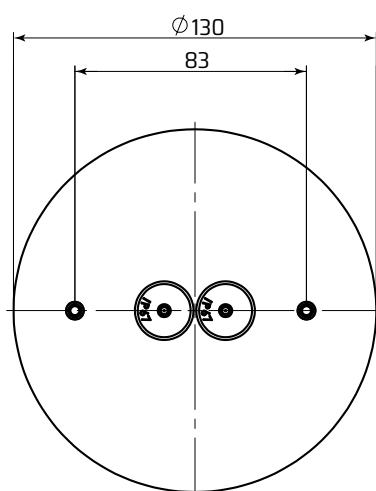


MOUNTING KIT CONTENTS

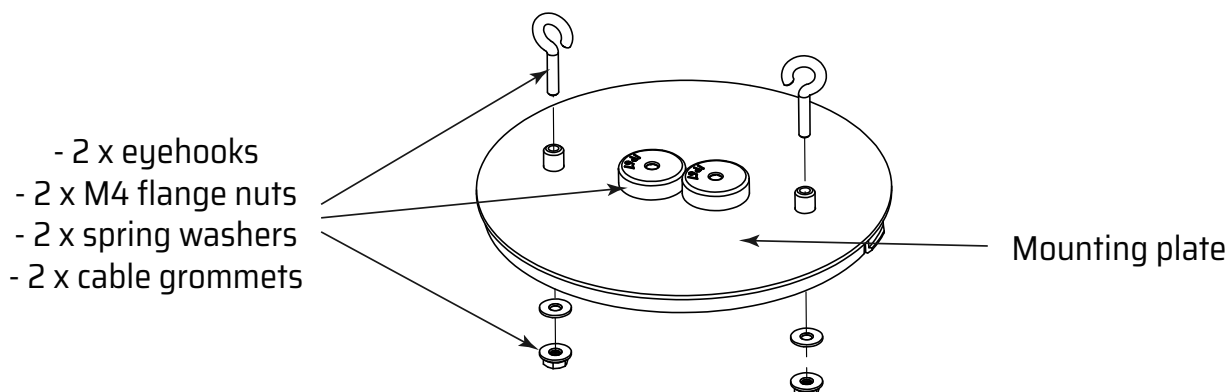

Follow the **SAFETY** included in the OWA SU LED luminaire installation manual

INSTALLATION


1. Unpack the luminaire and mounting kit after transport and verify their condition.
2. In order to seal apply neutral silicone in the housing base grooves.

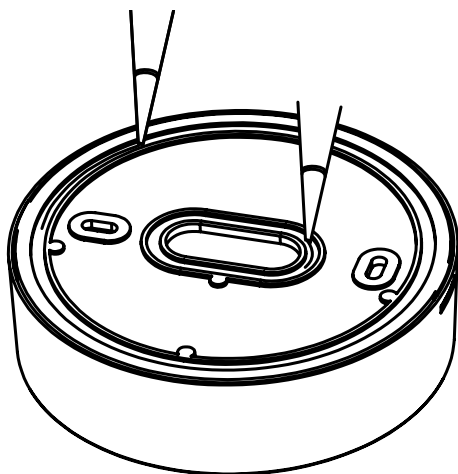

3. In the case of direct attachment to the ceiling (access to the inter-ceiling space necessary) drill two holes according to the spacing shown in the picture (see DIMENSIONS), so that the cables from the ceiling pass freely through the grommets in the mounting plate.


Connect the mounting kit with the luminaire and screw the M4 screws of the appropriate length into the mounting holes of the mounting plate. Fill the bolt heads with neutral silicone.

Pass the power cables (and communication cables for the CT version) through the cable grommets in the mounting plate and through the opening in the luminaire base. Then attach the kit to the ceiling by screwing on the flange nuts from the side of the inter-ceiling space.

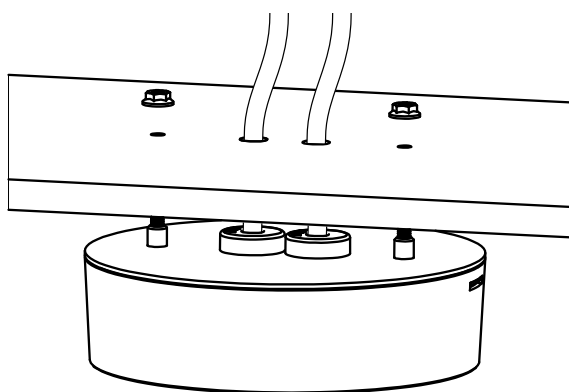

4. In the case of suspension mounting connect the kit together with the luminaire base and screw the eye hooks into the holes of the mounting plate, then screw the flange nuts. Fill the bolt heads with neutral silicone.

Pass the power cables (and communication cables for the CT version) through the cable glands in the mounting plate and through the opening in the luminaire base. Hang the set on cords or chains from the ceiling (elements ordered separately).

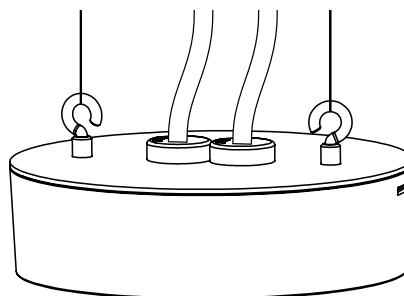

5. Perform the next steps in accordance with the luminaire installation manual.

WARRANTY

Warranty is valid and enforceable only when manufacturer's recommendations are preserved and the installation and usage are proper. Warranty is granted for a period of 12 months from the date of sale, unless the product has been sold under different contract conditions. The warranty is excluded in case of misuse, unsuitable use, wrong connection or mechanical defects of the product caused by the client.