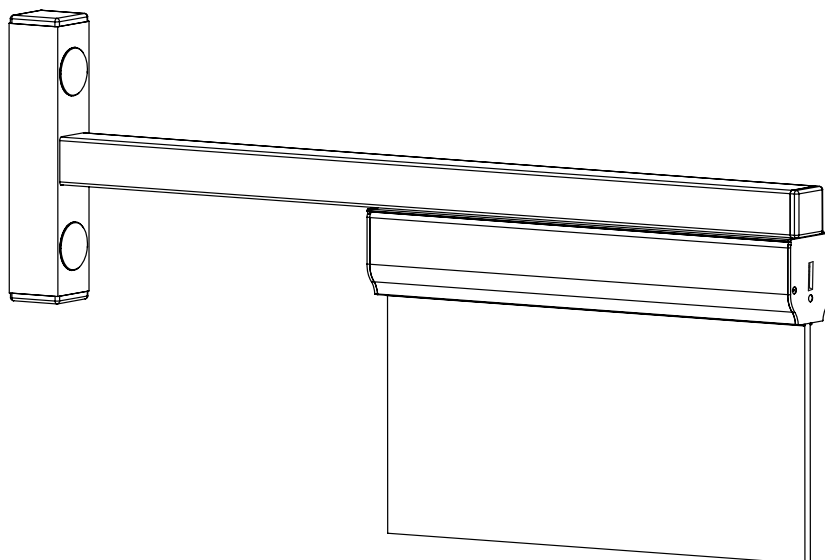



UTILIGHT II W151

INSTRUKCJA MONTAŻU **PL**


Zestaw mocowania W151 jest przeznaczony dla opraw kierunkowych UTILIGHT II SGN. Umożliwia montaż oprawy bokiem do ściany za pomocą wysięgnika o długości wybranej z dostępnego zakresu. Zestawu nie należy montować w miejscach przewiewnych.

WYMAGANIA I ZALECENIA BEZPIECZEŃSTWA

Należy stosować się do wymagań i zaleceń bezpieczeństwa zawartych w instrukcji montażu oprawy UTILIGHT II SGN.

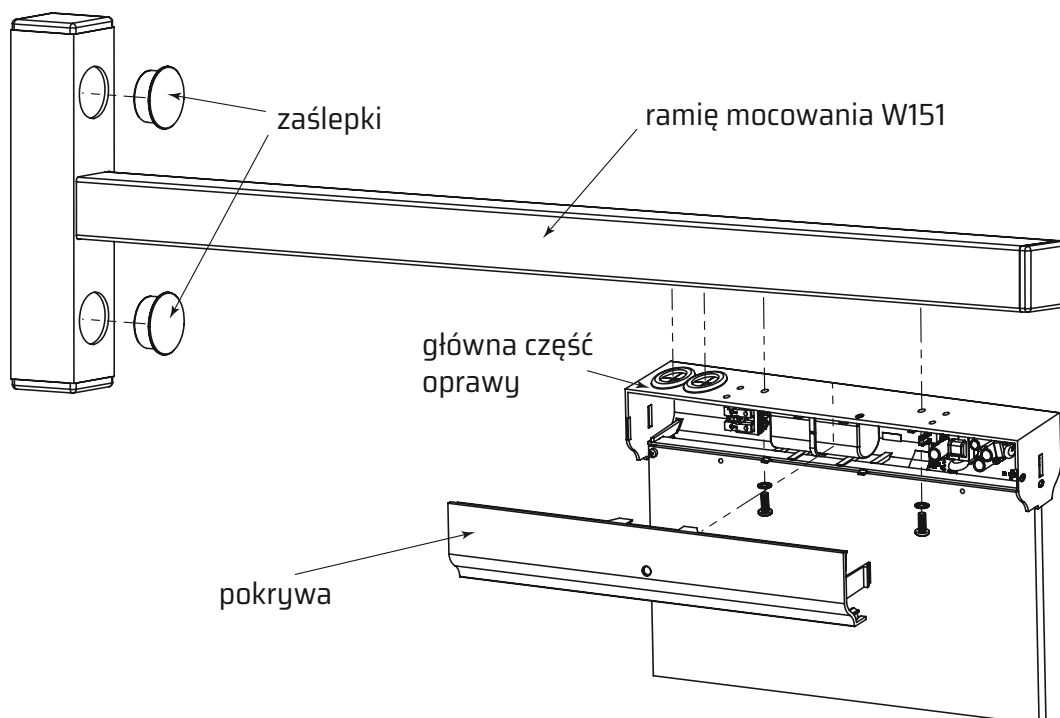BUDOWA ZESTAWU

WYMIARY MONTAŻOWE (mm)

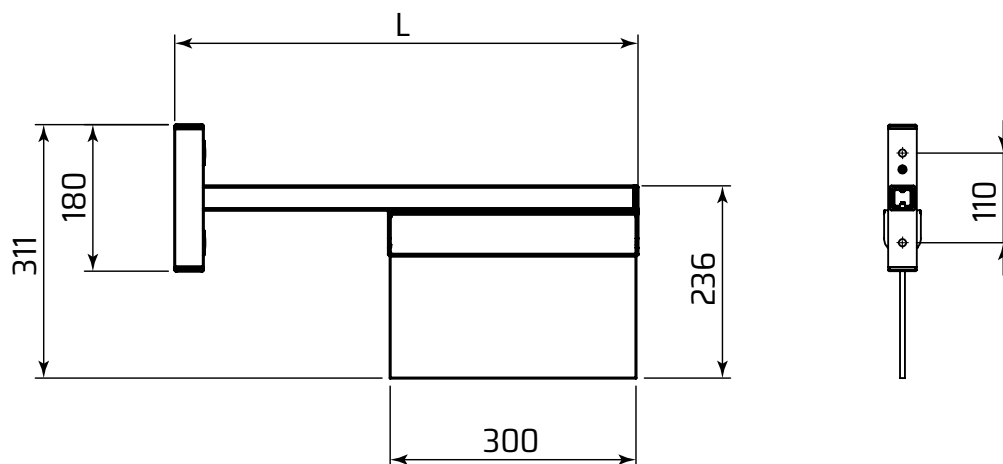

L – odległość zewnętrznej krawędzi oprawy od ściany, zdefiniowana przez wersję handlową. Zakres długości **L**: 40 - 100 cm.




PRZED WYKONANIEM JAKIEJKOLWIEK CZYNNOŚCI ZWIĄZANEJ Z OTWARTCIEM OPRAWY NALEŻY UPEWNIĆ SIĘ, ŻE NAPIĘCIE W PRZEWODACH ZASILANIA DOPROWADZONYCH DO NIEJ ZOSTAŁO ODŁĄCZONE.


Wszelkie czynności montażowe i serwisowe oprawy mogą być wykonywane tylko i wyłącznie przez wykwalifikowany, posiadający odpowiednie uprawnienia i odpowiednio przeszkolony personel.

INSTALACJA


1. Wykonać w ścianie otwory zgodnie z rozstawem otworów montażowych (patrz Wymiary montażowe).
2. Wprowadzić przewód zasilający oraz komunikacyjny (tylko CT) przez otwór w ramieniu mocowania W151. Przykręcić zestaw montażowy do ściany, wykorzystując wcześniej wykonane otwory w ścianie. Należy użyć kołków lub śrub odpowiednich dla podłoża montażowego. Zaślepić otwory montażowe załączonymi do zestawu zaślepkami.

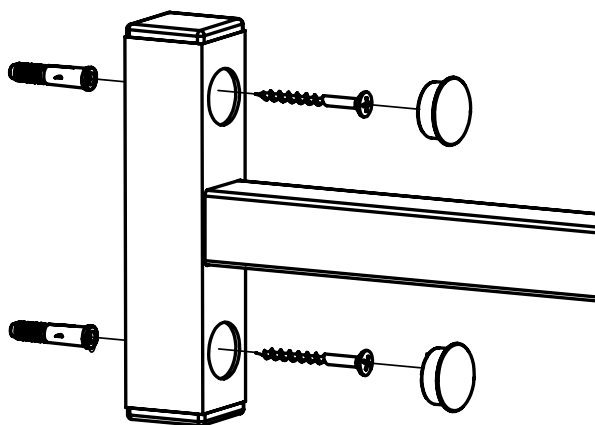

3. Wywiercić w korpusie oprawy wymagane otwory pod przepusty zasilania i/lub pod przepusty linii komunikacyjnej oraz otwory do montażu głównej części. Otwory zaleca się wiercić nie przekraczając 600 obr./min. przy użyciu wiertła piórkowego. Zamontować przepusty.

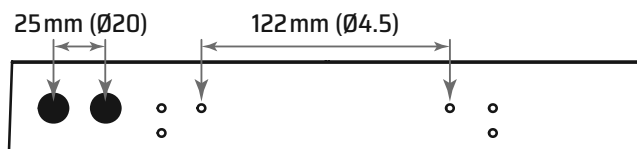

4. Wprowadzić przewód zasilający oraz komunikacyjny (tylko CT) przez przepusty w części montażowej oprawy. Przykręcić część montażową do ramy mocowania zgodnie z poniższym rysunkiem. Kolejne czynności wykonywać zgodnie z instrukcją oprawy.

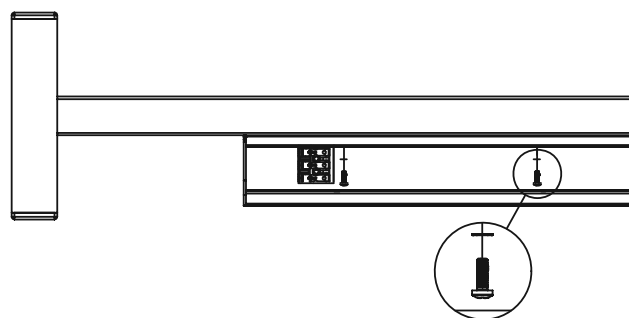


GWARANCJA

Gwarancja na wyrób obowiązuje pod warunkiem przestrzegania zaleceń i wskazówek producenta oraz użytkowania produktu zgodnie z przeznaczeniem, na okres 12 miesięcy licząc od daty sprzedaży, chyba że wyrób sprzedany został w ramach kontraktu i ten stanowi inaczej. Gwarancja nie obejmuje usterek mechanicznych powstałych z winy klienta, a także usterek wynikłych na skutek złego podłączenia bądź użytkowania wyrobu.

UTILIGHT II W151



INSTALLATION MANUAL **EN**

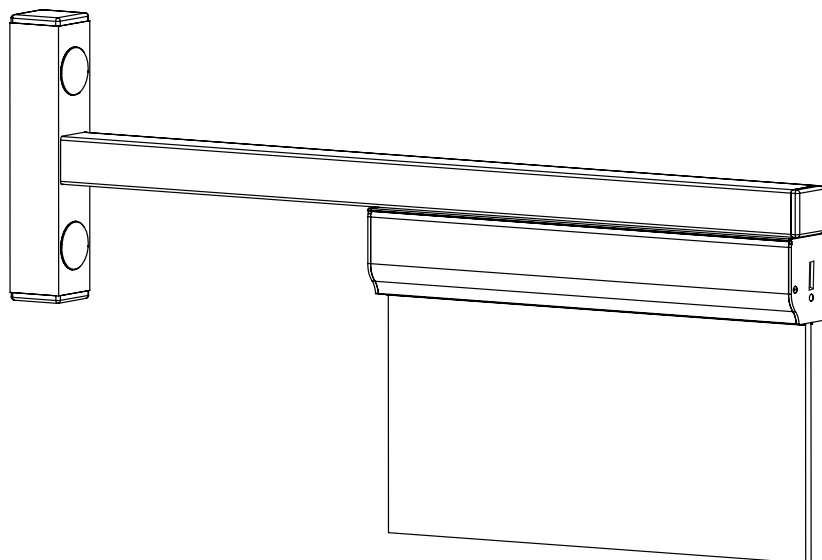


The W151 mounting kit is intended for UTILIGHT II SGN luminaires. Luminaires are mounted sideways to the wall with using a boom of a length selected from the available range. The kit should not be installed on the windward side.


SAFETY

It should be respected the safety instructions and recommendations contained in the UTILIGHT II SGN installation and maintenance manual.

LUMINAIRE CONSTRUCTION

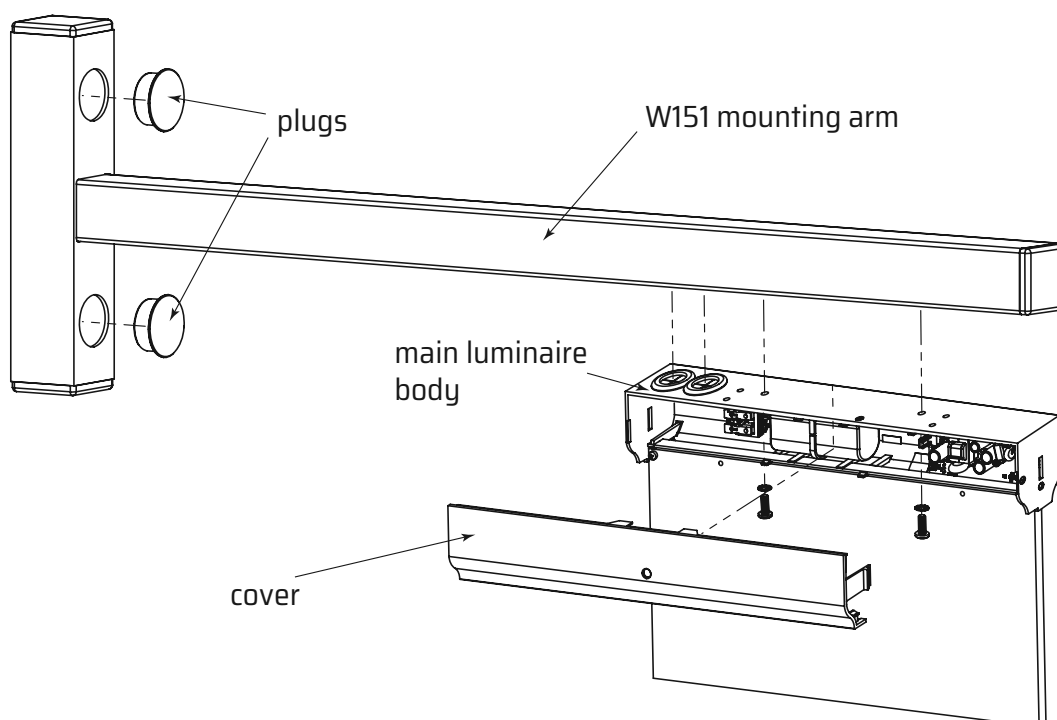

MOUNTING DIMENSIONS (in mm)

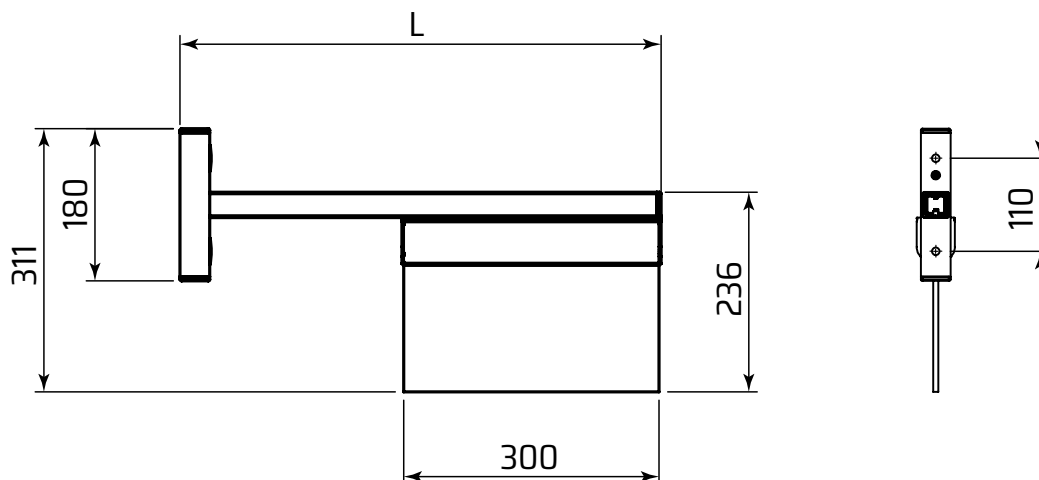

L – distance of the outer edge of the luminaire from the wall, defined by the commercial version. Range of length L: 40 - 100 cm.




BEFORE ANY INSTALLATION OR MAINTENANCE OPERATION IS PERFORMED ON THE LUMINAIRE THE POWER SUPPLY SHOULD BE DISCONNECTED.


All installation and maintenance procedures can be performed only by qualified, properly trained and if appropriate, certified staff.

INSTALLATION


1. Drill holes in wall according to mounting hole spacing.(see MOUNTING DIMENSIONS)
2. Carry out the power cable through the cable gland in the frame. Screw the mounting kit to the wall using previously prepared mounting hole in the wall. Use dowels or screws, appropriate for the material luminaire is being mounted to. Mounting holes should be plugged by the plugs enclosed to the kit.

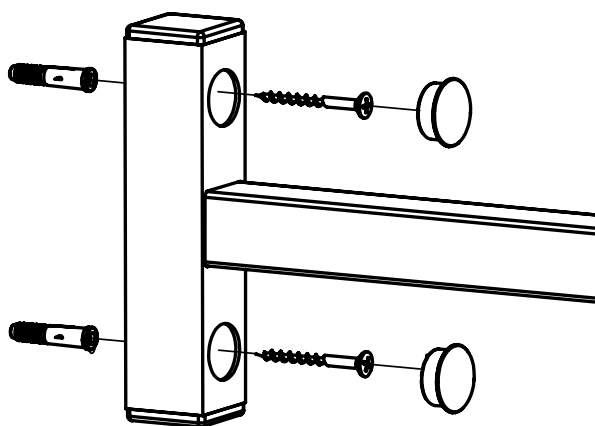

3. Drill the required holes in the luminaire body, for power cables and/or communication line bushings and holes for mounting the main part. It is recommended to drill the holes not exceeding 600 rpm using a spade drill. Mount the bushings.

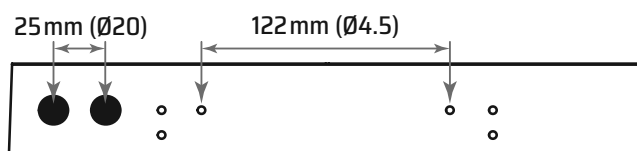

4. Carry out the power cable through the mounting part cable gland. Screw the mounting part to the frame according to the figure. Perform next steps in accordance with an instruction manual of the luminaire.

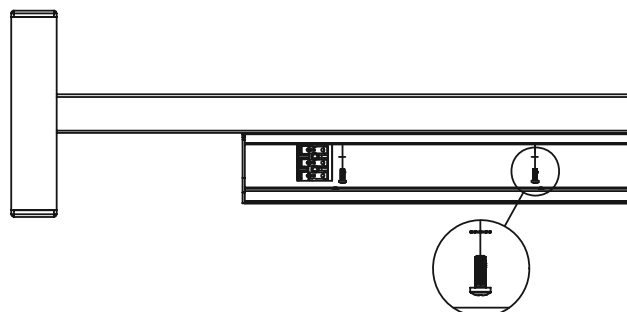

WARRANTY

Warranty is valid and enforceable only when manufacturer's recommendations are preserved, and the installation and usage are proper. Warranty is granted for a period of 12 months from the date of sale, unless the luminaire has been sold under different contract conditions. The warranty is excluded in case of misuse, unsuitable use, wrong connection or mechanical defects of the luminaire caused by the client.