


UTILIGHT W141



INSTRUKCJA MONTAŻU **PL**

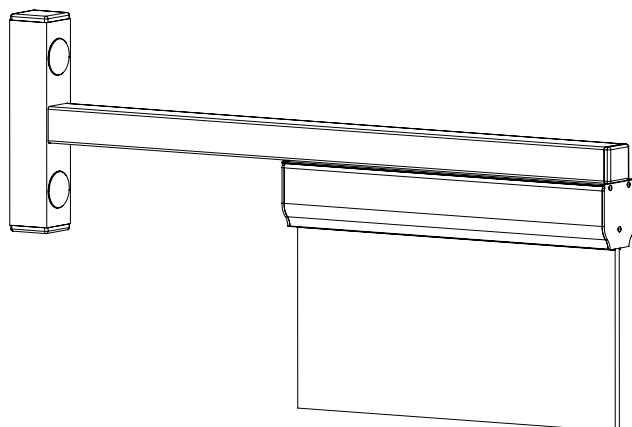





Zestaw mocowania W141 dedykowany jest dla opraw kierunkowych UTILIGHT SGN LED. Umożliwia zamontowanie oprawy bokiem do ściany na specjalnym ramieniu (semafor) o dowolnej długości (maksymalna długość ramienia $L_{max}=1m$). Zestaw jest kompatybilny z oprawami z wszystkimi dostępnymi wymiarami oraz z mocowaniem C142. Zestawu nie należy montować w miejscach przewiewnych.

WYMAGANIA I ZALECENIA BEZPIECZEŃSTWA

Należy stosować się do wymagań i zaleceń bezpieczeństwa zawartych w instrukcji montażu oprawy UTILIGHT SGN LED.

BUDOWA ZESTAWU

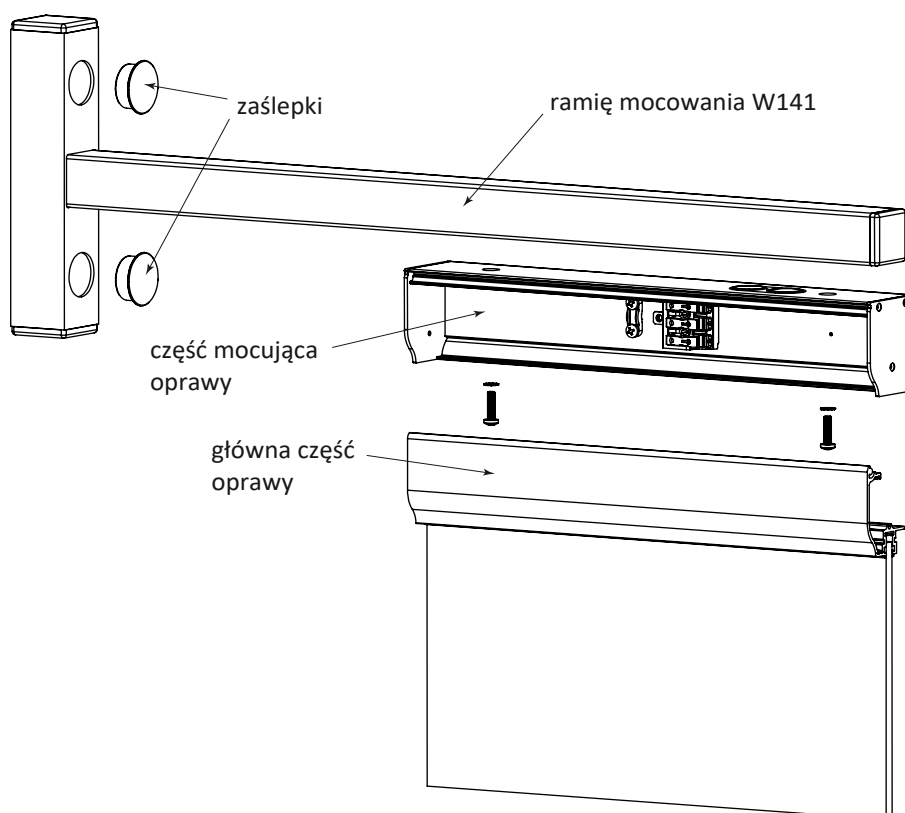

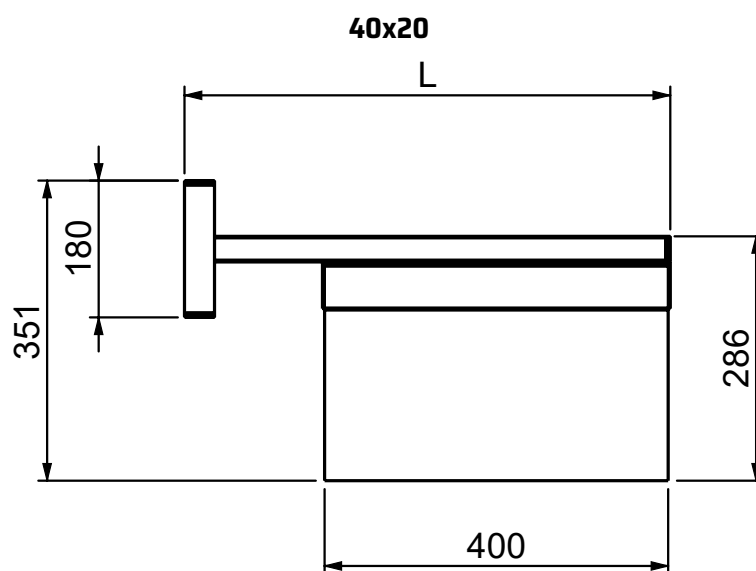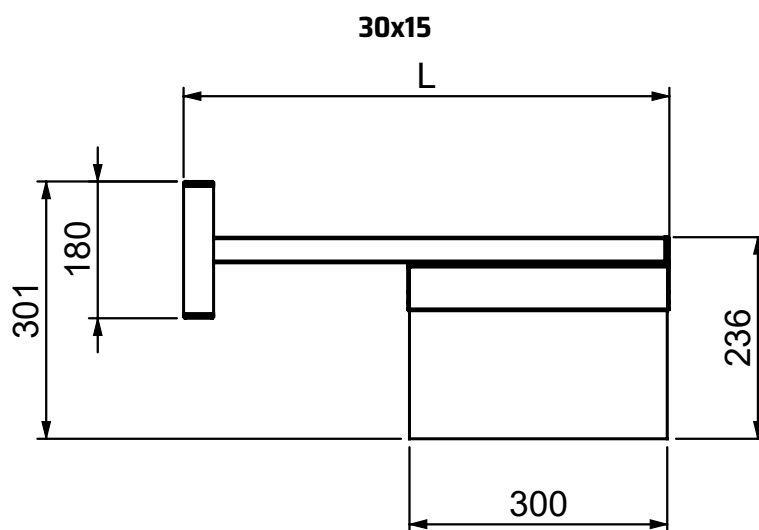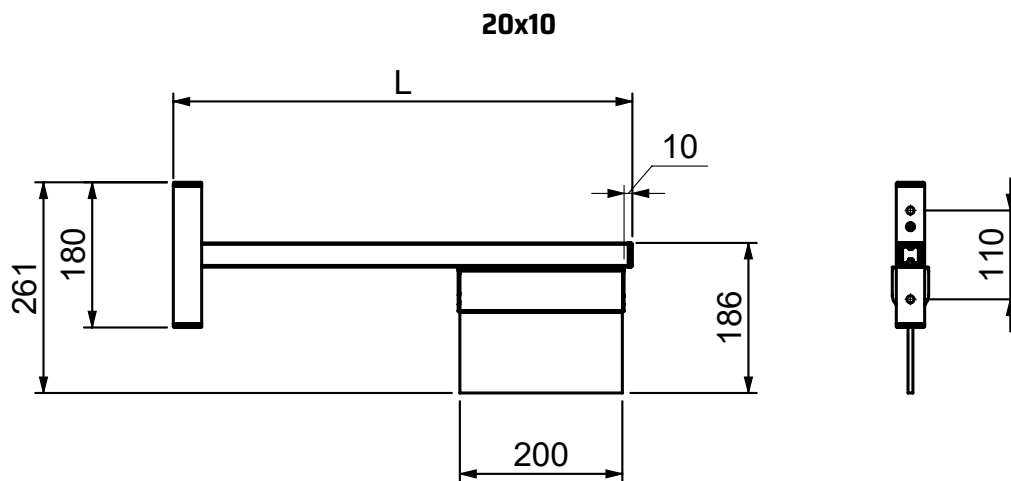

L - odległość zewnętrznej krawędzi oprawy od ściany, zdefiniowana przez wersję handlową

Zakres długości L

Wymiary znaku bezpieczeństwa [cm]	L _{MIN} [cm]	L _{MAX} [cm]
20x10	40	100
30x15	50	100
40x20	60	100


UWAGA**!!!**

Przed wykonaniem jakiejkolwiek czynności związanej z otwarciem oprawy należy upewnić się, że napięcie w przewodach zasilania doprowadzonych do niej zostało odłączone.


Wszelkie czynności montażowe i serwisowe oprawy mogą być wykonywane tylko i wyłącznie przez wykwalifikowany, posiadający odpowiednie uprawnienia i odpowiednio przeszkolony personel.

INSTALACJA


1. Wykonać w ścianie otwory zgodnie z rozstawem otworów montażowych.

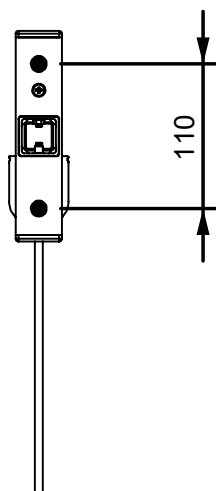

2. Wprowadzić przewód zasilający oraz komunikacyjny (tylko CT) przez otwór w ramieniu mocowania W141. Przykręcić zestaw montażowy do ściany, wykorzystując wcześniej wykonane otwory w ścianie. Należy użyć kołków lub śrub odpowiednich dla podłoża montażowego. Zaślepić otwory montażowe załączonymi do zestawu zaślepkami.

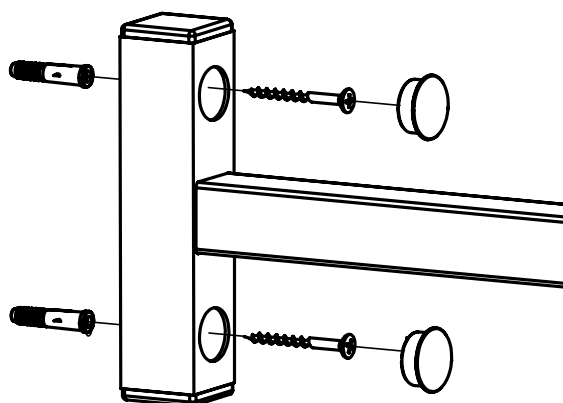

3. Wprowadzić przewód zasilający oraz komunikacyjny (tylko CT) przez przepusty w części montażowej oprawy. Przykręcić część montażową do ramy mocowania zgodnie z poniższym rysunkiem. Kolejne czynności wykonywać zgodnie z instrukcją oprawy.

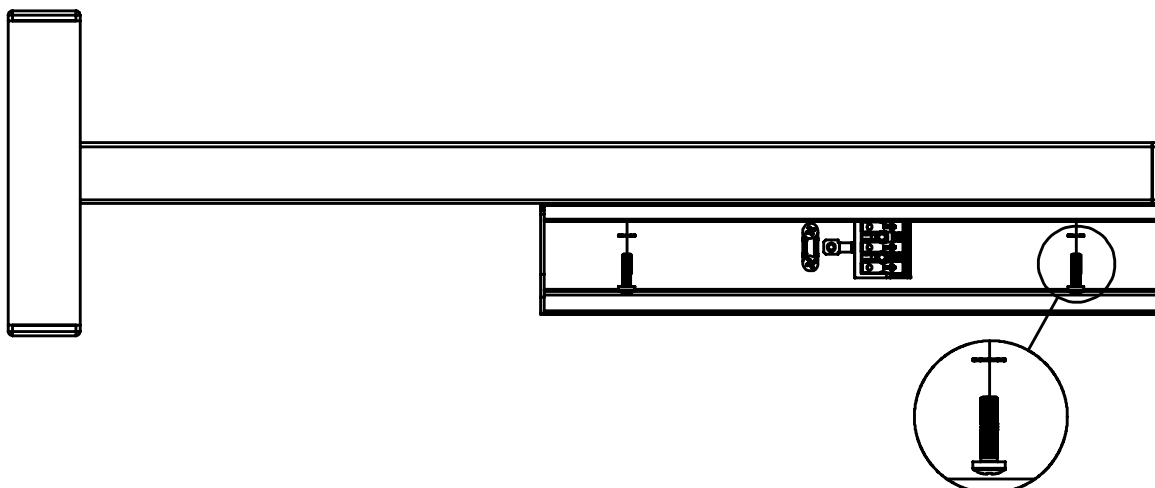


GWARANCJA

Gwarancja na wyrób obowiązuje pod warunkiem przestrzegania zaleceń i wskazówek producenta oraz użytkowania produktu zgodnie z przeznaczeniem, na okres 12 miesięcy licząc od daty sprzedaży, chyba że wyrób sprzedany został w ramach kontraktu i ten stanowi inaczej. Gwarancja nie obejmuje usterek mechanicznych powstałych z winy klienta, a także usterek wynikłych na skutek złego podłączenia bądź użytkowania wyrobu.

UTILIGHT W141



INSTALLATION MANUAL **EN**

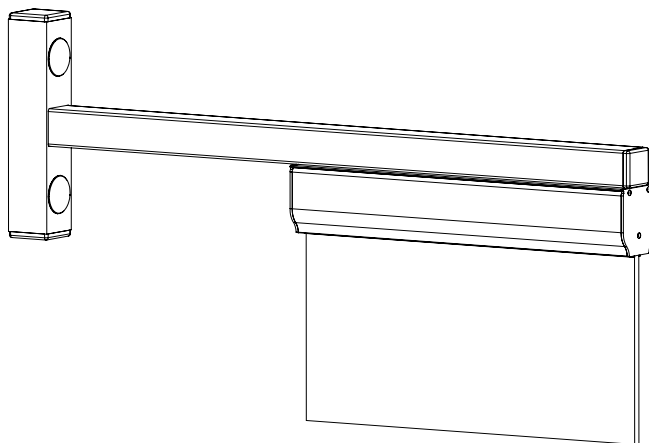


The W141 mounting kit is dedicated for UTILIGHT SGN LED luminaires. Luminaires are mounted sideways to the wall with the help of additional arms (maximum arm length $L_{max}=1m$). The kit is compatible with all dimension's luminaires and C142 mounting type. The kit should not be installed on the windward side.




SAFETY

It should be respected the safety instructions and recommendations contained in the UTILIGHT SGN LED installation and maintenance manual.

LUMINAIRE CONSTRUCTION

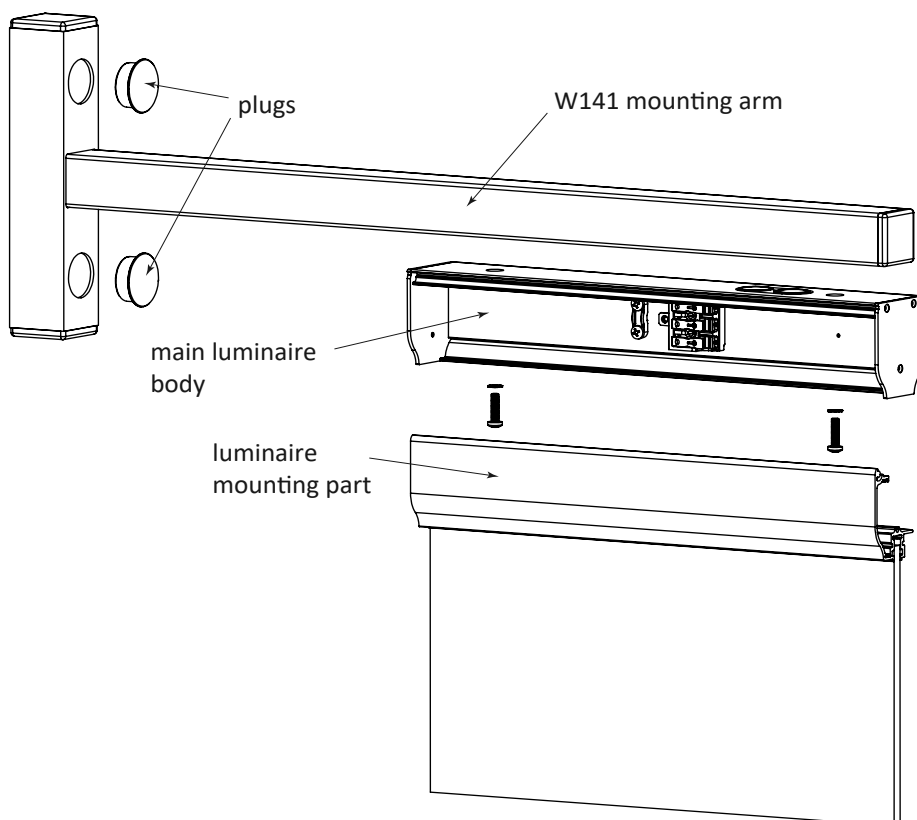

MOUNTING DIMENSIONS W141 (in mm)

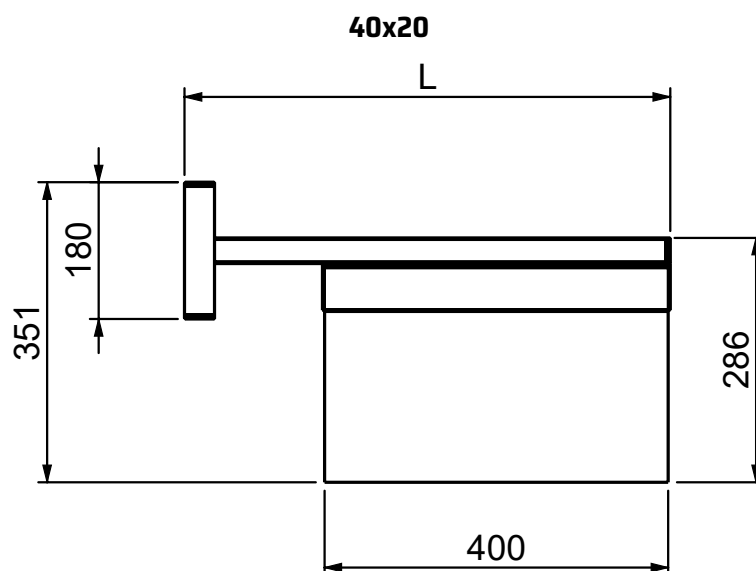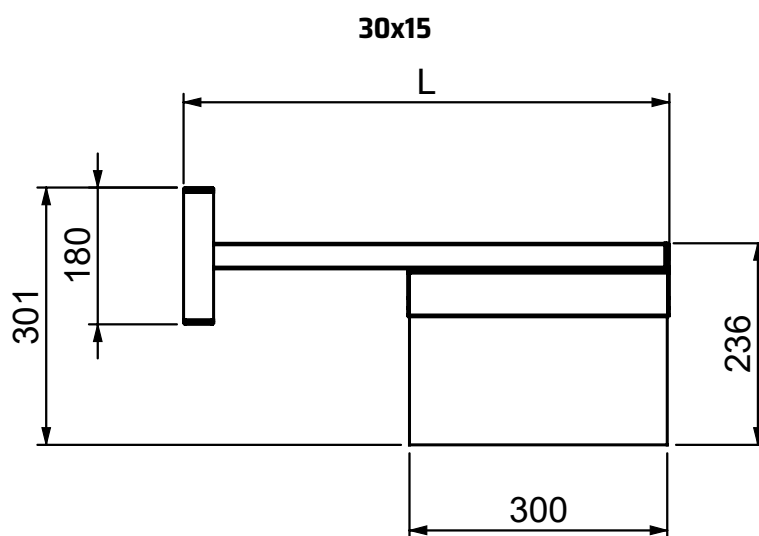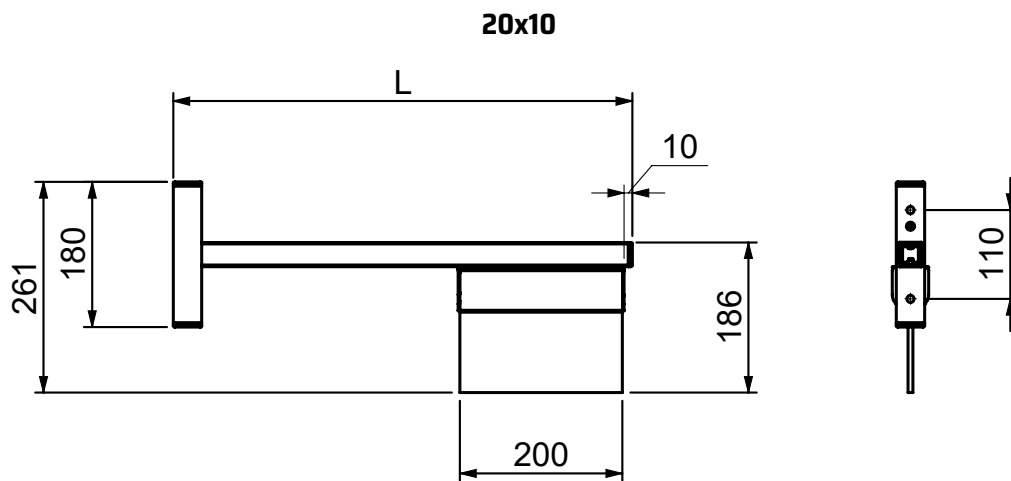

L - distance of the outer edge of the luminaire from the wall, defined by the commercial version

Range of length L


Safety sign dimensions [cm]	L _{MIN} [cm]	L _{MAX} [cm]
20x10	40	100
30x15	50	100
40x20	60	100

WARNING !!!


Before any installation or maintenance operation is performed on the luminaire the power supply should be disconnected. All installation and maintenance procedures can be performed only by qualified, properly trained and if appropriate, certified staff.

INSTALLATION


1. Drill holes in wall according to mounting hole spacing.

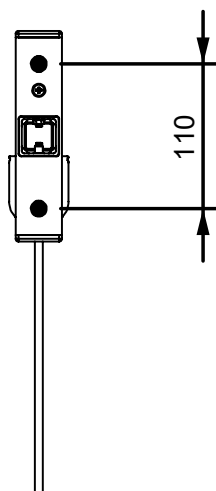

2. Carry out the power cable through the cable gland in the frame. Screw the mounting kit to the wall using previously prepared mounting hole in the wall. Use dowels or screws, appropriate for the material luminaire is being mounted to. Mounting holes should be plugged by the plugs enclosed to the kit.

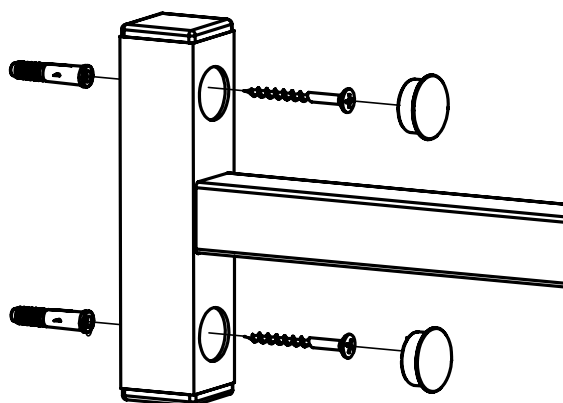

3. Carry out the power cable through the mounting part cable gland. Screw the mounting part to the frame according to the figure. Perform next steps in accordance with an instruction manual of the luminaire.

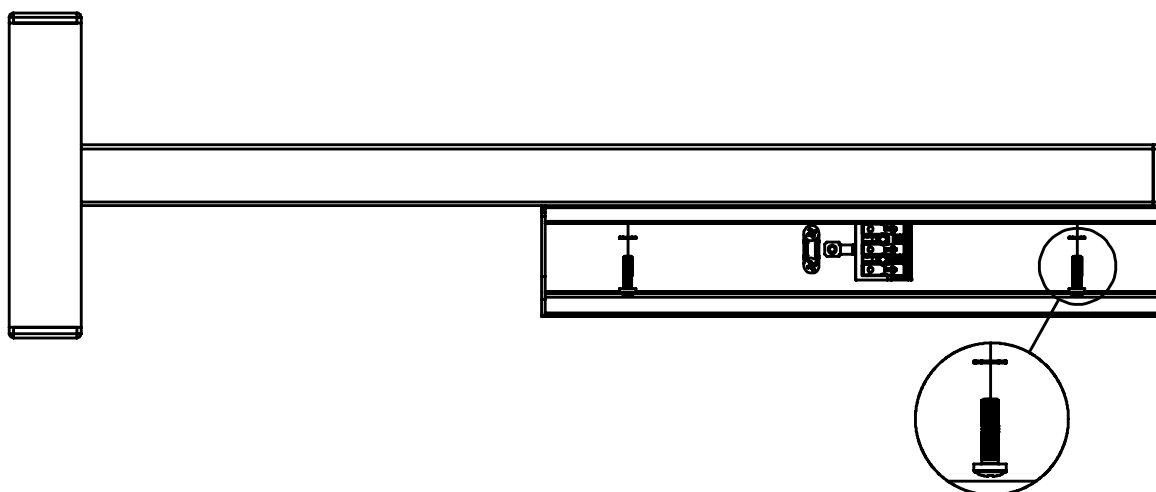

WARRANTY

Warranty is valid and enforceable only when manufacturer's recommendations are preserved, and the installation and usage are proper. Warranty is granted for a period of 12 months from the date of sale, unless the luminaire has been sold under different contract conditions. The warranty is excluded in case of misuse, unsuitable use, wrong connection or mechanical defects of the luminaire caused by the client.